




MASTER POWER BRAKES

110 Crosslake Park Drive, Mooresville, NC 28117

Website: www.mpbrakes.com

Technical Support: 888-533-1199

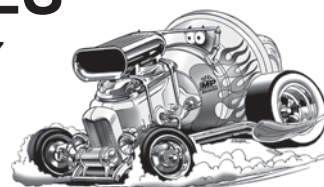

WARNING

Disc brake conversions require disc brake wheels. Drum brake wheels will not clear the disc brake calipers.

Minimum specifications for a disc brake wheel:

1. Correct bolt circle
2. Large center hole to clear the rotor hub center
3. 15"X 7"
4. 3 3/4" backspace
5. Wheel drop center (spokes) that clear caliper

CUSTOMER IS RESPONSIBLE FOR PROPER WHEEL FITMENT

Proper operation of your brakes is essential for your safety and the safety of others. Any brake service should be performed **ONLY** by persons experienced in the installation and proper operation of brake systems. It is the responsibility of the person installing the component or kit for the particular application. After installation and before operating your vehicle, be sure to test the function of the brakes under controlled conditions.

//////////////////// **DO NOT DRIVE WITH UNTESTED BRAKES!** //////////////////////
FOR TECHNICAL ASSISTANCE CALL:

888-533-1199

MONDAY - FRIDAY

8:00 A.M. TO 5:00 P.M. E.S.T.

CHECK ORDER IMMEDIATELY WARRANTY INFORMATION

Take time to read all the literature that came with this kit. Check the provided list of parts against what you received to ensure all parts are present. While this kit was designed to make the process of changing brake parts as simple as possible, **with some kits it may be necessary to make minor changes to your car.**

Read all warranty disclaimers and return policies included in this kit prior to installation.

You have: **5 days** to declare shipping damages
 30 days to declare missing or incorrect parts
 90 days for exchanges or returns (RA req'd)
 1 year before product warranty expires.

No exceptions allowed.

**WARRANTY: Void if
silicone fluid is used in
system**

Thank you for your business!



MASTER POWER BRAKES

110 Crosslake Park Road, Mooresville, NC 28117

Website: www.mpbrakes.com Technical Support: 888-533-1199

© 2006 MP Brakes. All rights reserved. Master Power® is a registered trademark of Master Power Brakes, LLC



BM1755

Installation Instructions

WARNING:

Installation of any component or kit should only be performed by persons experienced in the installation and proper operation of brake systems. It is also the responsibility of the person installing any brake component or kit to determine the suitability of the component or kit for that particular application.

NOTE:

Before operating the vehicle after installation test the function of the brakes under controlled conditions. Make several stops in a safe area from low speed and gradually work up to normal speeds. **DO NOT DRIVE WITH UNTESTED BRAKES!**
Always utilize safety restraints when operating the vehicle.

STEP 1:

1. Check to be sure that your kit has all the necessary parts needed to complete this project! (Use the supplied parts list as a check list.)

STEP 2:

Remove the following components from your car:

Tech tip: Prior to disassembly spray the nuts and bolts that you will be removing with a penetrant. (Also disconnect the battery to eliminate the risk of draining the battery or an electrical short.)

1. Disconnect the brake lines to the master cylinder.
2. Next, remove the push rod from the brake pedal.
3. Then remove the old manual master. Leave the four studs that are extending out of the firewall, the booster will mount to them.

STEP 3:

Things to prepare before assembly of the new booster & master kit.

1. Remove the new master cylinder from the booster assembly.
2. Bench bleed the new master cylinder to remove all the air. If all the air is removed from the master, then it will be difficult to push the piston in.

How to bench bleed:

Remove the master from the booster and place in a vice. (Be sure to clamp onto the mounting ear and not the cylinder.)

Install the proper size plugs in the outlet ports of the master.

Fill the master cylinder to the full line with brake fluid.

Use a rounded end rod or a phillips head screw driver and push the piston in repeatedly until no bubbles are visible.

NOTE: This may take a minute or two of continuous pumping!

3. Mount the supplied push rod and clevis to the back of the booster.

STEP 4: (Cont.)

7. Attach the brake lines to the master. **If your brake kit came with a combination valve then it is important that you remove any factory installed valves from the system. Failure to do this could result in a nonfunctional brake system.** Then install the combination valve. **(Figure 5)**



8. On vehicles which had a single outlet master cylinder you will need to install a new hard line from the proportioning valve outlet to a T-fitting and then on to the rear wheels. There are two outlets for the front wheel on the combination valve. You have the option of running a line from each wheel to each outlet or running both lines to a T-fitting and then into one of the front outlets. **(In this scenario, you will have to plug the unused outlet.)** Either way is acceptable and neither routing has improved braking performance over the other. **(Be sure to keep all lines away from exhaust, steering or other things that could harm them.)**

9. When the valve is plumbed correctly and all hard lines are attached, bleed the entire system.

10. If you are not using a combination valve, or you have four wheel drum brakes, you will need to run one line from the master cylinder to the front and one to the rear. The outlet furthest from the booster will feed the front brakes. **(Figure 6)** We recommend that you use a 10lb residual valve on both the front and rear drum brakes to provide a firmer pedal feel.

11. Reconnect the battery and start the engine. Test the brakes. If the pedal goes to the floor or is very spongy then bleed the system once again.

12. Test drive the car in a safe location before driving.

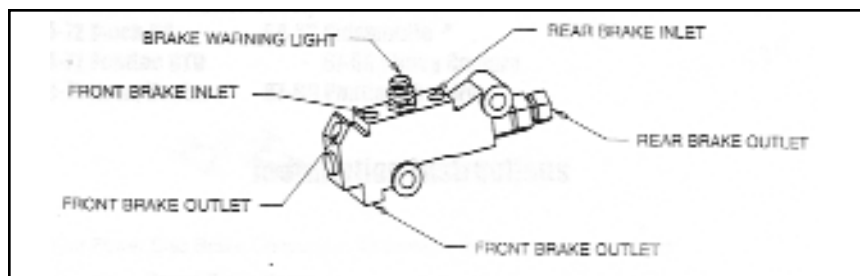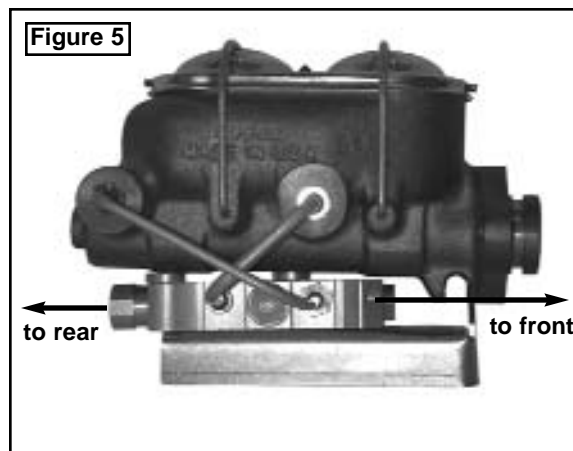

Master Power Brakes 888-533-1199



BM1755

Booster & Master Parts List



Parts included in the box:

1. (1) Booster and master unit with bracket.
2. (1) Vacuum hose kit.
3. (1) Set of instructions.
4. (1) Push rod with clevis.

Master Power Brakes
888-533-1199